

POWERNESS

Hiker U72 Power Bank




User Manual / Benutzerhandbuch /

Guide d'emploi / Manual de Usuario /

Guida utente / Інструкція користувача

EN

PRODUCT FEATURES

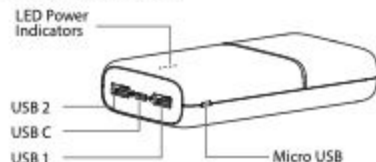

Specifications

Model: Hiker U72

Capacity: 20000mAh

Life cycle: ≥300 cycles

Input (Micro-USB): 5V/2A 9V/2A 12V/1.5A

Type-C Input: 5V/2.4A 9V/2A 12V/1.5A


Type-C Output: 5V/2.4A 9V/2A 12V/1.5A

USB-1/2 Output: 4.5V/5A 5V/3A 9V/2A 12V/1.5A

Charging time: Approx.10h

Battery Type: Lithium-Polymer

Power: 74Wh

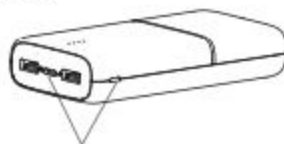

Micro USB/USB C



Charging Your Power Bank

Connect the USB charging cable to your AC adapter(not included).The LED on the power bank will blink to indicate the charging status.Disconnect the power bank from AC adapter when the power bank is fully charged.

NOTE:

1. Charging time may vary depending on your charging adapter.
2. It is not recommended to charge the power bank through a computer port.
3. An AC adapter with 2A output or more is recommended to charge this power bank.

EN

To Charge Your Devices

Charge your devices with Hiker U72's two USB ports.

LED INDICATORS

Press the button on the side of the power bank to activate the battery indicator. The table below shows how much battery you have left.

○ LIGHT ON ● LIGHT OFF

○ ○ ○ ○ 75 - 100%

○ ○ ○ ● 50 - 75%

○ ○ ● ● 25 - 50%

○ ● ● ● 0 - 25%

Package Contents

1. Power Bank

2. USB Cable

3. User Manual



Warning

- * Keep the product away from extreme heat or cold, as well as any flammable items or damp places, also avoid dropping, hitting or throwing the product.
- * Please fully charge your external battery at least once every three months to avoid shortening its lifespan.

Warranty

This product is covered by a limited warranty from Powerness for the original purchaser that covers the product from defects in workmanship and materials for 24 months from the date of purchase.

This Warranty does not apply to defects or damages to Products caused by human error-related factors or any other non-ordinary factors, including but not limited to:

- A. Malfunctions or damages caused by force majeure such as natural calamity or any inappropriate use by any person.
- B. Product has been repaired or taken apart by unauthorized technicians.
- C. Warranty label is altered, damaged or missing.
- D. Product serial number does not conform to manufacturer's records, or is difficult to ascertain.

Email: service@powerness.com